



Frontpanel

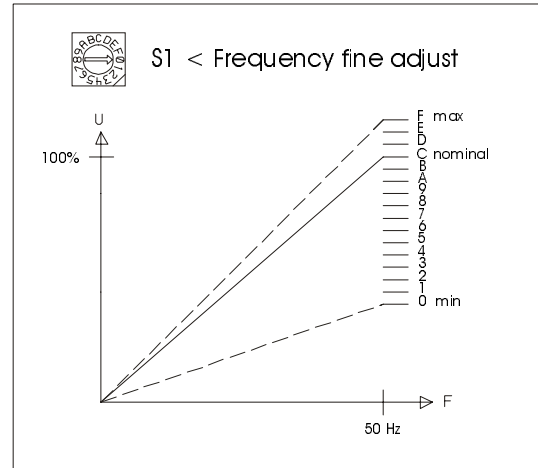

S3 > Frequency

SWITCH	Frequency	at 0...10 V Command 1	100 %
0	0 ... 144 Hz		60 Hz
1	0 ... 120 Hz		50 Hz
2	0 ... 288 Hz		120 Hz
3	0 ... 240 Hz		100 Hz
4	0 ... 57.6 Hz		240 Hz
5	0 ... 480 Hz		200 Hz
6	0 ... 1152 Hz		480 Hz
7	0 ... 960 Hz		400 Hz
8	0 ... 60 Hz		60 Hz
9	0 ... 50 Hz		50 Hz
A	0 ... 120 Hz		120 Hz
B	0 ... 100 Hz		100 Hz
C	0 ... 240 Hz		240 Hz
D	0 ... 200 Hz		200 Hz
E	0 ... 480 Hz		480 Hz
F	0 ... 400 Hz		400 Hz

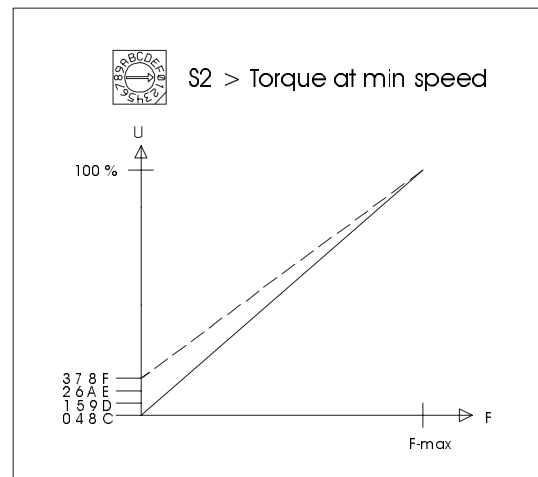

S4 > Currentlimit adjust

Switch	Current
0	0 ... 0%
1	0 ... 6%
2	0 ... 13%
3	0 ... 20%
4	0 ... 26%
5	0 ... 33%
6	0 ... 40%
7	0 ... 46%
8	0 ... 53%
9	0 ... 60%
A	0 ... 66%
B	0 ... 73%
C	0 ... 80%
D	0 ... 86%
E	0 ... 93%
F	0 ... 100%

ACM 500

Bedienungsfeld und Anschlussbelegung



Antriebstechnik AG